


Цепи для мототехники Motorcycle chains

ТУ 000303018-035-97

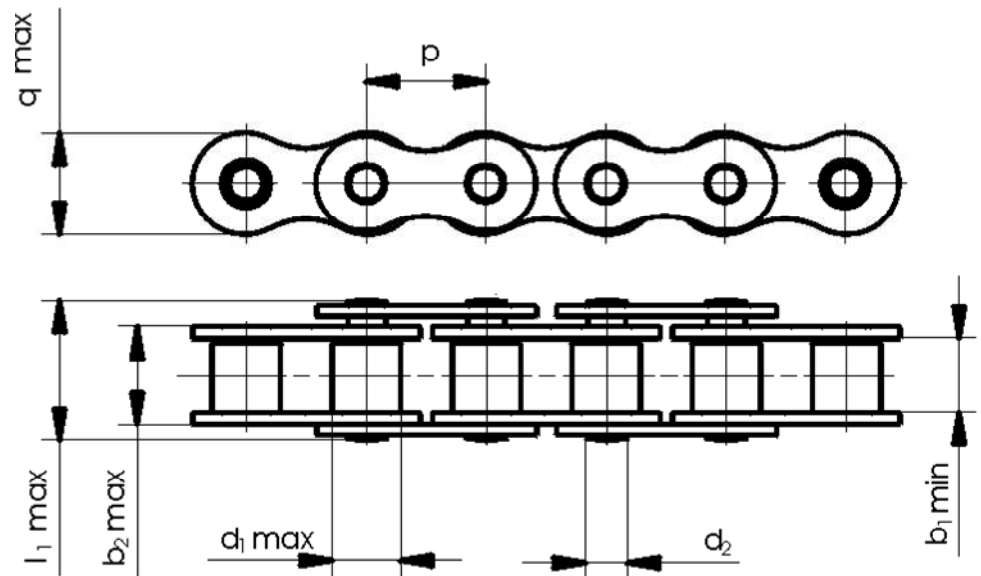

| Обозначение Description | p | b ₁ | b ₂ | d ₂ | d ₁ | l ₁ | q | Разрушающая нагрузка Breaking load |
|----------------------------|--------|----------------|----------------|----------------|----------------|----------------|------|--|
| | mm | mm | mm | mm | mm | mm | mm | N |
| 415 | 12.7 | 4.88 | 7.23 | 3.62 | 7.75 | 11.45 | 9.4 | 10000 |
| 415B | 12.7 | 4.88 | 7.8 | 3.96 | 7.75 | 11.9 | 10.2 | 12000 |
| 420 | 12.7 | 6.35 | 9.65 | 3.96 | 7.77 | 14.85 | 11.8 | 13800 |
| 428 | 12.7 | 7.95 | 11.3 | 4.45 | 8.51 | 16.4 | 11.8 | 18200 |
| 520 | 15.875 | 6.35 | 11.3 | 5.31 | 10.16 | 18 | 15.5 | 31000 |



Соединительное
звено с замком

Connecting link
with spring clip